


EAT•N

Hydraulics

HOWTO...

Identify and cure piping leaks

1 in

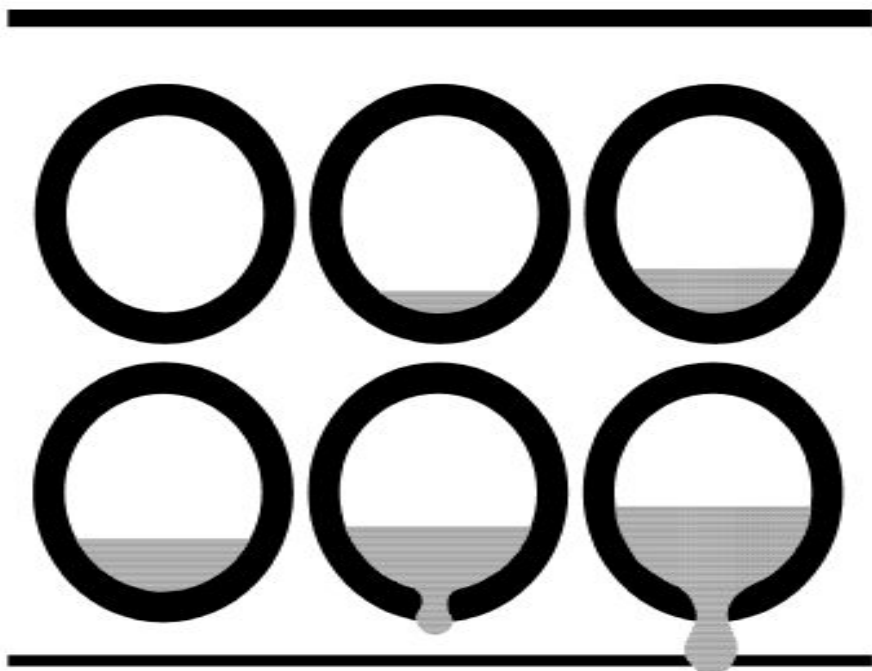

Index

| | |
|--|----|
| The Basic Causes of Fluid System Leakage | 3 |
| Find the Leak | 3 |
| SAE 37° Flare Connection | 4 |
| SAE Straight Thread O-Ring Seal | 6 |
| SAE 4-Bolt Split Flange Connection | 8 |
| O-Ring Face Seal Connection | 10 |
| O-Ring Basics | 12 |
| Pipe Threads | 13 |
| Metric Pressure Conversion Tables | 14 |

Introduction

Every industry has piping system leakage. This condition exists between the drawing board and the scrap dealer at all levels of industry including:

- The OEM level – The delivery of new units may be delayed because of fluid system leakage.
- The dealer level – Sales may be lost if oil drips from the unit onto the showroom floor.
- The user level – Leakage causes too much costly downtime.

In this booklet you will find a condensation of more than 60 years of Eaton's experience in working with the basic types of fitting configurations that contribute to piping system leakage. The causes of most leakage are identified and appropriate corrective measures are suggested.

The Basic Causes of Fluid System Leakage

1. Human error
2. Lack of quality control
3. Poor protection of components in handling
4. Difficult if not impossible to reach fitting connections
5. Lack of education
6. Poor selection of materials
7. Improper design of piping or routing

Find the Leak


1. Pinpoint the leak location. To make sure that the leak is not up higher and draining down:
 - a) Wash down the leakage area.
 - b) Watch for the leak to show.
 - c) Place a paper towel above the connection; it will catch any fluid leaking from above.
2. Determine if the leak is at a valve spool, rod packing, motor or pump shaft, cracked casting, piping joint or hose or tube.

remember – Seepers or weepers can be hard to locate.



Leak Problem Areas

SAE 37° Flare Connection (SAE J514)

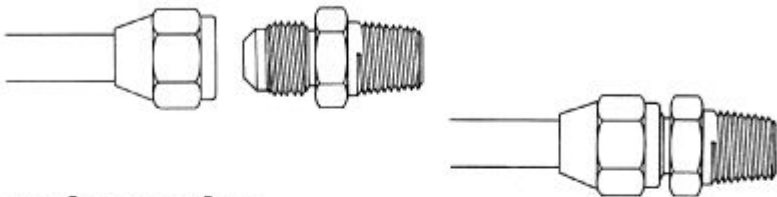

how it works:

This connection seals on the two mating 37° seats.

 
causes:

Most of the leaks on this connection are due to lack of tightening or human error. You can't tell if the nut has been tightened by just looking at the connection. If it is more than finger tight, you can't tell from observation how much. Torque wrenches are good only when they are used. You must rely on the user to be sure torque wrenches are used on all joints. The user must depend on his memory to know if he has tightened all of the joints.


cure:

Here are steps for an excellent method of tightening. Anyone can tell if the joint was tightened and how much.

1. Tighten the nut by hand until it bottoms the seats.
2. Using a marker, draw a line lengthwise on the nut and extend it onto the adapter.
3. Using a wrench, rotate the nut to tighten. Turn the nut the amount shown in the chart on the next page.



Mark a line on the nut and adapter before torquing.

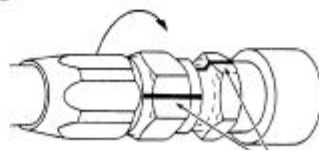

Misalignment of the mark shows the amount which the nut was tightened.

| Line Size | Rotate No. of Hex Flats (For machined flares only) |
|-----------|---|
| -04 | 1½ - 1¾ |
| -05 | 1 - 1½ |
| -06 | 1 - 1½ |
| -08 | 1¼ - 1¾ |
| -10 | 1¼ - 1¾ |
| -12 | 1 - 1½ |
| -16 | ¾ - 1 |
| -20 | ½ - ¾ |
| -24 | ½ - ¾ |
| -32 | ¾ |

Note: The misalignment of the marks will show how much the nut was tightened and, best of all, that it has been tightened.

What to do if the joint leaks after it has been tightened properly

Disconnect the line and check for:

1. Foreign particles in the jointWash them off
2. Cracked seatsReplace them
3. Seat mismatching or not concentric with the threadsReplace the faulty part
4. Deep nicks in the seatsReplace the faulty part
5. Excessive seat impression. This indicates excessive torque on the swivel nut or too soft a material for high pressures. Threads will stretch under high pressureReplace the faulty part
6. Chatter or tool mark – high and low spots on seatsReplace the faulty part
7. SAE 45° nuts, when connected to an SAE 37° male flare fitting, will leak. The SAE 45° nut may be too long and can bottom on the adapter hex before the seats are tightUse all SAE 37° flare parts

remember – Many of the leakage problems on this type of connection won't show until the unit has been in service for a few hours.

in
1



Leak Problem Areas

(SAE J514)

SAE Straight Thread O-Ring Seal

how it works:

This connection seals with an O-Ring on the male against a chamfer in the port. The use of straight thread O-Ring ports in place of pipe threads helps eliminate hydraulic leakage.



causes:

1. Elbows loosen up after short service
2. O-Ring seal leakage after short service
3. O-Ring seal leakage after long service
4. Instant leakage upon start up due to human error or faulty parts

cures:





1. The locknut and washer must be to the top side of the thread relief. The washer must be snug to the thread relief. If not, reject the part.
2. Lubricate the O-Ring – this is very important.
3. Thread the male O-Ring half into the port until the washer or solid hex bottoms onto the machined surface. Note: Make sure the spot face is large enough to accommodate the washer or hex of the adapter.
4. Position the elbow for desired alignment by backing it out of the port up to one full turn.
5. Tighten the locknut or solid hex.

Why O-Ring lubrication is important:

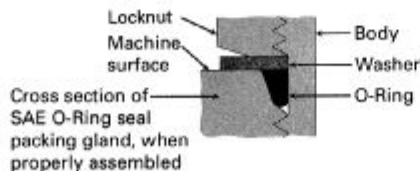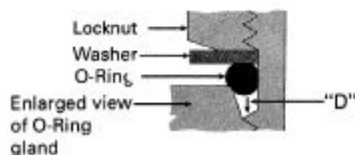

1. The fitting is engaged to the point where the O-Ring touches the face of the boss. Lubrication on the O-Ring permits it to move in direction "D."

- When the O-Ring and the boss are dry, the rotary motion of the assembly can cause friction and the O-Ring can move in direction "C."
- The locknut and washer cannot bottom fully if the O-Ring is between the washer and the face of the boss. The compressed rubber between the washer and the boss will cold flow out from compression and the fitting will be loose and usually leak.

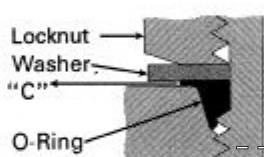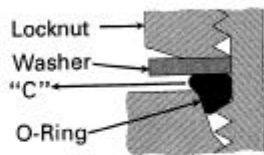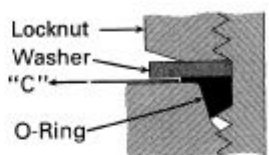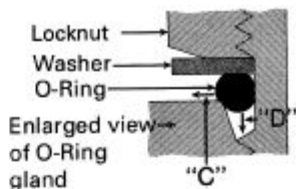

What happens when the locknut and washer are not backed up prior to assembly:

- When the locknut and washer have not been backed up, there is not enough room for the O-Ring seal when the squeeze takes place.
- The washer can't seat properly on the face of the boss. The compressed rubber between the washer and the boss face will cold flow out from compression, and the fitting will be loose and usually leak.

in
1





| SAE J515 Straight Thread O-Ring | | | |
|---------------------------------|-------------------|----------------|-------------|
| Dash Size | Tubeing O.D. Ref. | W, Width, Dia. | Inside Dia. |
| -2 | 1/8 | .064±.003 | .239±.005 |
| -3 | 3/16 | .064±.003 | .301±.005 |
| -4 | 1/4 | .072±.003 | .351±.005 |
| -5 | 5/16 | .072±.003 | .414±.005 |
| -6 | 3/8 | .078±.003 | .468±.005 |
| -8 | 1/2 | .087±.003 | .644±.005 |
| -10 | 5/8 | .097±.003 | .755±.005 |
| -12 | 3/4 | .116±.004 | .924±.006 |
| -14 | 7/8 | .116±.004 | 1.048±.006 |
| -16 | 1 | .116±.004 | 1.171±.006 |
| -20 | 1 1/4 | .118±.004 | 1.475±.010 |
| -24 | 1 1/2 | .118±.004 | 1.720±.010 |
| -32 | 2 | .118±.004 | 2.337±.010 |

| Recommended torque values for straight fittings or locknuts | |
|---|---------------|
| Dash Size | Foot - Pounds |
| -04 | 13 - 15 |
| -05 | 14 - 15 |
| -06 | 23 - 24 |
| -08 | 40 - 43 |
| -10 | 43 - 48 |
| -12 | 68 - 75 |
| -16 | 112 - 123 |
| -20 | 146 - 161 |
| -24 | 154 - 170 |
| -32 | 218 - 240 |



Leak Problem Areas

SAE 4-Bolt Split Flange Connection (SAE J518 Codes 61 and 62)

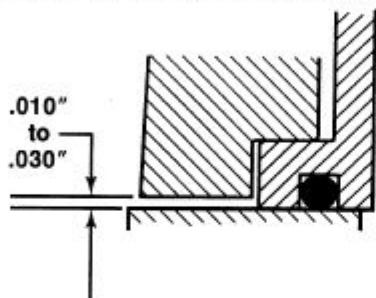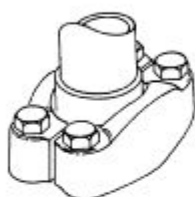


how it works:

The SAE 4-bolt split flange connection is a face seal. The flanged head which contains an O-Ring seal must fit squarely against the mating surface and be held there with even tension on all bolts. The flanged head protrudes past the split flange clamps by .010 to .030 inch. This is to ensure that the flanged head will make contact with the mating accessory surface, compressing the O-Ring to form the seal.

Recommended Torque Values
(Use Grade 5 bolts or better due to the high torque level required.)

| Connection Size | Recommended Torque Inch-Pounds | |
|-----------------|--------------------------------|-----------|
| | Code 61 | Code 62 |
| -08 | 175-225 | 175-225 |
| -12 | 250-350 | 300-400 |
| -16 | 325-425 | 500-600 |
| -20 | 425-550 | 750-900 |
| -24 | 550-700 | 1400-1600 |
| -32 | 650-800 | 2400-2600 |
| -40 | 950-1100 | - |
| -48 | 1650-1800 | - |


Note: Air wrenches tend to cause flange tipping.

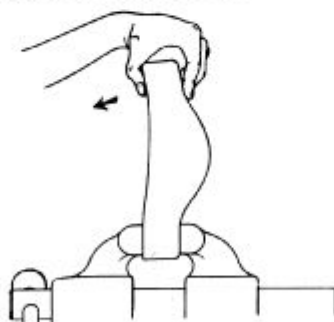

Bending of bolts and flanges soaks up much of the torque values.



causes:

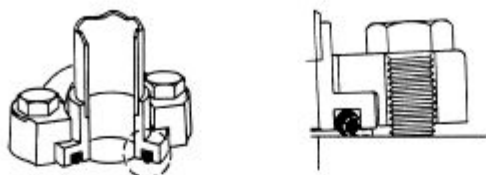

This connection is sensitive to installation errors and bolt torquing. Because of the flanged head protrusion and the flange clamp overhang, the flanges tend to tip up in a seesaw fashion when the bolts are tightened on one end. This pulls the opposite end of the flange away from the flanged head and, when hydraulic pressure is applied to the line, pushes the flanged head into a cocked position allowing seal extrusion.

cure:

All bolts must be installed and torqued evenly. Finger tightening will help to get the flanges and shoulder started squarely. If lock washers are used, even more care must be taken.

a second cause:

When excessive torque is applied to the bolts, the flanges often bend down until they bottom on the accessory. This also causes the bolts to bend outward.

Bending of the flanges and bolts tend to lift the flange off the shoulder in the center area between the long spacing of the bolts.




Bent flanges cause the bolts to bend.



Gaps up to .036 have been found on some leakers with bent flanges.

No hold down compression at center of shoulder.

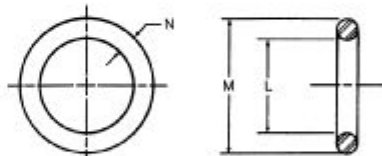

Basic O-Ring dimensions are shown for reference only


SAE J518 Codes 61 and 62 O-Ring Seal

| Dash Size | L I.D. Ref. (in.) | M O.D. Ref. (in.) | N Dia. Ref. (in.) | SAE J120 O-Ring Size No. |
|-----------|-------------------|-------------------|-------------------|--------------------------|
| -08 | .734 | 1.012 | .139 | 210 |
| -12 | .984 | 1.262 | .139 | 214 |
| -16 | 1.296 | 1.574 | .139 | 219 |
| -20 | 1.484 | 1.762 | .139 | 222 |
| -24 | 1.859 | 2.137 | .139 | 225 |
| -32 | 2.234 | 2.512 | .139 | 228 |
| -40 | 2.734 | 3.012 | .139 | 232 |
| -48 | 3.359 | 3.637 | .139 | 237 |



Leak Problem Solution

O-Ring Face Seal Connection (SAE J1453)

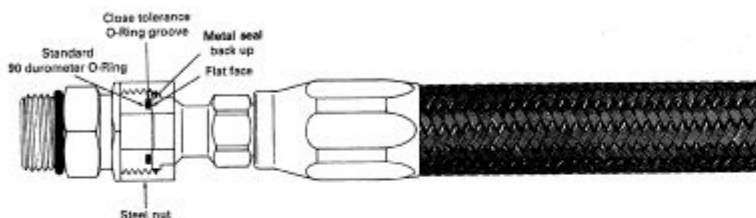

Eaton's O-Ring Face Seal fittings and adapters are flat faced O-Ring seal connections that provide an excellent solution for leakage problems. These connections meet SAE J1453 performance requirements and are designed to handle working pressures up to 6000 psi. In order for this connection to virtually eliminate piping leaks, care must be taken to avoid the following problems, which may cause leakage.

causes:

1. Lack of proper tightening Always use the following recommended torque values for maximum service life.


cures:

O-Ring Face Seal Connection Recommended Torque Values

| Connection Dash Size | Swivel Nut Torque | |
|----------------------|-------------------|------------|
| | (in.-lbs.) | (ft.-lbs.) |
| -04 | 120-144 | 10-12 |
| -06 | 216-240 | 18-20 |
| -08 | 384-420 | 32-35 |
| -10 | 552-600 | 46-50 |

| Connection Dash Size | Swivel Nut Torque | |
|----------------------|-------------------|------------|
| | (in.-lbs.) | (ft.-lbs.) |
| -12 | 780-840 | 65-70 |
| -16 | 1104-1200 | 92-100 |
| -20 | 1500-1680 | 125-140 |
| -24 | 1800-1980 | 150-165 |

2. No O-Ring in the groove Make sure that the O-Ring does not fall out of the male end before the connection is made. Proper lubrication will help.
3. Improper O-Ring size Although the O-ring Face Seal connection uses a standard size O-Ring, it is not the same size as those used on O-Ring boss or split flange fittings. It is critical that the correct O-Ring is used. The proper dash sizes and dimensions are listed on the chart below.

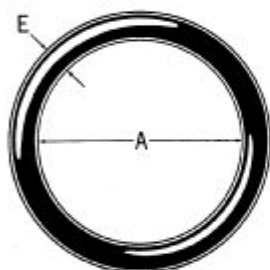

| SAE J120 O-Ring Size Designation | Tube Size | A (inches) | E (inches) |
|----------------------------------|-----------|------------|------------|
| -011 | -4 | .301 | .07 |
| -012 | -6 | .364 | .07 |
| -014 | -8 | .489 | .07 |
| -016 | -10 | .614 | .07 |
| -018 | -12 | .739 | .07 |
| -021 | -16 | .926 | .07 |
| -025 | -20 | 1.176 | .07 |
| -029 | -24 | 1.489 | .07 |

Torque values for SAE O-Ring boss ends, when used with O-Ring Face Seal connections,* per SAE J1453.


| Dash Size | Thread Size Inch | Straight Fitting or Locknut Torque | |
|-----------|------------------|------------------------------------|------------|
| | | (in.-lbs.) | (ft.-lbs.) |
| -03 | 3/8-24 | 96-120 | 8-10 |
| -04 | 7/16-20 | 168-192 | 14-16 |
| -05 | 1/2-20 | 216-240 | 18-20 |
| -06 | 9/16-18 | 288-312 | 24-26 |
| -08 | 3/4-16 | 600-720 | 50-60 |
| -10 | 7/8-14 | 864-960 | 72-80 |
| -12 | 1 1/16-12 | 1500-1620 | 125-135 |
| -14 | 1 3/16-12 | 1920-2160 | 160-180 |
| -16 | 1 5/16-12 | 2400-2640 | 200-220 |
| -20 | 1 5/8-12 | 2520-3360 | 210-280 |
| -24 | 1 7/8-12 | 3240-4320 | 270-360 |

* Increased torque values are required for the increased pressure capabilities of O-Ring Face Seal connections.


O-Ring Basics

For virtually all types of fluid connectors involving O-Rings, there are common guidelines that should always be followed:


1. Care should be taken to ensure that the O-Ring is properly seated when the connection is made.
2. For maximum service life, use only O-Rings that are made of materials recommended by Eaton for the application. Maximum temperature ratings must not be exceeded for long lasting leak-proof connections.
3. O-Rings should be lubricated using a compatible high shear oil. Lubricate as necessary to prevent rolling or cutting upon connection. For EPR O-Rings, use a vegetable-base lubricant or the system fluid.
4. Keep all connecting surfaces clean and grit free.
5. Used O-Rings should be replaced before re-installation to help prevent leakage problems.

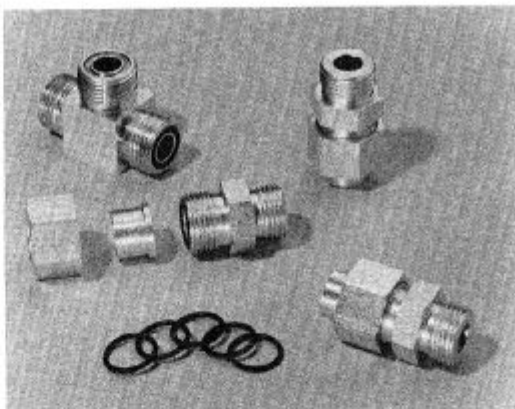

Eaton O-Ring Face Seal connections

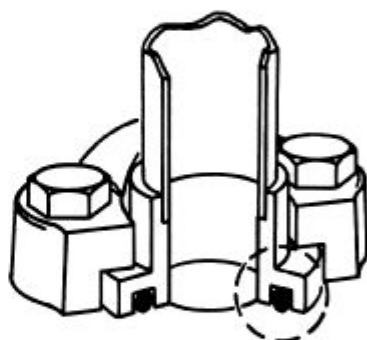

SAE 4-bolt split flange connection

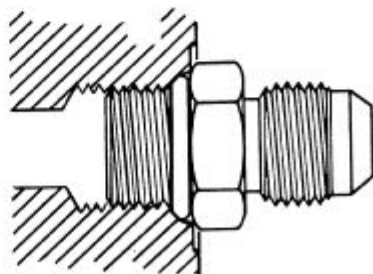

SAE O-Ring boss connection



Leak Problem Areas

Pipe Threads (SAE J514)

Pipe threads are not recommended for high pressure applications, since they tend to leak more than any other style of connection.

Symbol . . .

NPT – National Pipe Taper

NPTF – National Pipe Taper Fuel (Dryseal)

NPT threads are likely to leak much more than Dryseal pipe threads. Either kind of pipe thread will leak if under tightened. There is not a general accepted standard for tightening either style of tapered threads. The tightening requirements change with each reuse and/or type of sealant used. Use a good pipe sealant on the male threads. Over tightening may crack the female port. Teflon tape is not normally recommended for hydraulic systems.

causes:

cures:

1. Connector is not tight Tighten
2. Cracked port or connector Replace defective parts
3. Oversized threads in port Replace defective parts
4. Undersized threads on connector . . . Replace defective parts
5. Damaged threads, nicks, cuts, etc. . . Replace defective parts
6. Threads are not Dryseal standard
for hydraulics Use "NPTF DRYSEAL" standard
7. Straight male pipe threads
instead of tapered Use "NPTF DRYSEAL" standard
8. Contaminated threads, dirt,
chips, etc. Clean and inspect
9. High vibration loosening
connection Retighten connector – reevaluate
system design
10. Heat expansion of female threads . . . Retighten while hot
11. Too tight, causing thread distortion . . . Inspect and replace damaged
parts

out
1

Metric Pressure Conversion Tables

Bar to PSI

Multiply Bar by 14.5 = PSI

| Bar | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|-----|------|--------|------|--------|------|--------|------|--------|------|--------|
| | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI |
| 0 | – | 14.5 | 29 | 43.5 | 58 | 72.5 | 87 | 101.5 | 116 | 130.5 |
| 10 | 145 | 159.5 | 174 | 188.5 | 203 | 217.5 | 232 | 246.5 | 261 | 275.5 |
| 20 | 290 | 304.5 | 319 | 333.5 | 348 | 362.5 | 377 | 391.5 | 406 | 420.5 |
| 30 | 435 | 449.5 | 464 | 478.5 | 493 | 507.5 | 522 | 536.5 | 551 | 565.5 |
| 40 | 580 | 594.5 | 609 | 623.5 | 638 | 652.5 | 667 | 681.5 | 696 | 710.5 |
| 50 | 725 | 739.5 | 754 | 768.5 | 783 | 797.5 | 812 | 826.5 | 841 | 855.5 |
| 60 | 870 | 884.5 | 899 | 913.5 | 928 | 942.5 | 957 | 971.5 | 986 | 1000.5 |
| 70 | 1015 | 1029.5 | 1044 | 1058.5 | 1073 | 1087.5 | 1102 | 1116.5 | 1131 | 1145.5 |
| 80 | 1160 | 1174.5 | 1189 | 1203.5 | 1218 | 1232.5 | 1247 | 1261.5 | 1276 | 1290.5 |
| 90 | 1305 | 1319.5 | 1334 | 1348.5 | 1363 | 1377.5 | 1392 | 1406.5 | 1421 | 1435.5 |
| 100 | 1450 | 1464.5 | 1479 | 1493.5 | 1508 | 1522.5 | 1537 | 1551.5 | 1566 | 1580.5 |

Megapascal (MPa) to PSI

Multiply MPa by 145 = PSI

| MPa | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|-----|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI |
| 0 | – | 145 | 290 | 435 | 580 | 725 | 870 | 1015 | 1160 | 1305 |
| 10 | 1450 | 1595 | 1740 | 1885 | 2030 | 2175 | 2320 | 2465 | 2610 | 2755 |
| 20 | 2900 | 3045 | 3190 | 3335 | 3480 | 3625 | 3770 | 3915 | 4060 | 4205 |
| 30 | 4350 | 4495 | 4640 | 4785 | 4930 | 5075 | 5220 | 5365 | 5510 | 5655 |
| 40 | 5800 | 5945 | 6090 | 6235 | 6380 | 6525 | 6670 | 6815 | 6960 | 7105 |
| 50 | 7250 | 7395 | 7540 | 7685 | 7830 | 7975 | 8120 | 8265 | 8410 | 8555 |
| 60 | 8700 | 8845 | 8990 | 9135 | 9280 | 9425 | 9570 | 9715 | 9860 | 10005 |
| 70 | 10150 | 10295 | 10440 | 10585 | 10730 | 10875 | 11020 | 11165 | 11310 | 11455 |
| 80 | 11600 | 11745 | 11890 | 12035 | 12180 | 12325 | 12470 | 12615 | 12760 | 12905 |
| 90 | 13050 | 13195 | 13340 | 13485 | 13630 | 13775 | 13920 | 14065 | 14210 | 14355 |
| 100 | 14500 | 14645 | 14790 | 14935 | 15080 | 15225 | 15370 | 15515 | 15660 | 15805 |

in
1

Kg/cm² to PSI**Multiply Kg/cm² by 14.22 = PSI**

| Kg/cm ² | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|--------------------|--------|---------|---------|---------|---------|--------|---------|---------|---------|---------|
| | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI | PSI |
| 0 | - | 14.22 | 28.44 | 42.66 | 56.88 | 71.1 | 85.32 | 99.54 | 113.76 | 127.98 |
| 10 | 142.2 | 156.42 | 170.64 | 184.86 | 199.08 | 213.3 | 227.52 | 241.74 | 255.96 | 270.18 |
| 20 | 284.4 | 298.62 | 312.84 | 327.06 | 341.28 | 355.5 | 369.72 | 383.94 | 398.16 | 412.38 |
| 30 | 426.6 | 440.82 | 455.04 | 469.26 | 483.48 | 497.7 | 511.92 | 526.14 | 540.36 | 554.58 |
| 40 | 568.8 | 583.02 | 597.24 | 611.46 | 625.68 | 639.9 | 654.12 | 668.34 | 682.56 | 696.78 |
| 50 | 711.0 | 725.22 | 739.44 | 753.66 | 767.88 | 782.1 | 796.32 | 810.54 | 824.76 | 838.98 |
| 60 | 853.2 | 867.42 | 881.64 | 895.86 | 910.08 | 924.3 | 938.52 | 952.74 | 966.96 | 981.18 |
| 70 | 995.4 | 1009.62 | 1023.84 | 1038.06 | 1052.28 | 1066.5 | 1080.72 | 1094.94 | 1109.16 | 1123.38 |
| 80 | 1137.6 | 1151.82 | 1166.04 | 1180.26 | 1194.48 | 1208.7 | 1222.92 | 1237.14 | 1251.36 | 1265.58 |
| 90 | 1279.8 | 1294.02 | 1308.24 | 1322.46 | 1336.68 | 1350.9 | 1365.12 | 1379.34 | 1393.56 | 1407.78 |
| 100 | 1422.0 | 1436.22 | 1450.44 | 1464.66 | 1478.88 | 1493.1 | 1507.32 | 1521.54 | 1535.76 | 1549.98 |

out
1

Eaton

14615 Lone Oak Road
Eden Prairie, MN 55344
USA

Tel: 952 937-9800

Fax: 952 974-7722

www.hydraulics.eaton.com

Eaton

20 Rosamond Road
Footscray
Victoria 3011

Australia

Tel: (61) 3 9319 8222

Fax: (61) 3 9318 5714

Eaton

Dr.-Fleckeweg-Str.1
D-76532 Baden-Baden
Germany

Tel: (49) 7221 682-0

Fax: (49) 7221 682-788

EAT•N

Hydraulics

© 2003 Eaton Corporation
All rights reserved
Printed in USA
Document No. E-SRDV-TS004-E
Supersedes Bulletin JA14A
November 2003