



EAT•N

Weatherhead



Hose Assembly

Master Catalog



Table of Contents

APPLICATION DATA

Safety Information.....	4
Hose Selection	
Chart	5-10
Chemical Compatibility Chart	13-15
Hose End Pressure Chart	16
Numbering Systems	
Hose.....	17
Hose Ends	18
Hose End Identification.....	19-22
Skiving Procedures	23
Hose Installation and Failure Analysis	24-25
Qualified Hoses for Marine Applications.....	26
Qualified Hoses for American Bureau of Shipping (ABS)	27
Torque Specifications	28
Tubing Selection	29
Flow/Velocity Chart	31
Recommended Wall Thickness Tables.....	32-35

HOSE

Low/Medium Pressure Hose.....36-49

GH134W, H009, H017, H039, H039H, H057, H059, H069, H077, H100, H101, H104, H166, H169, H209, H213, H229, H239, H324, H332, H338, H366, H429, H569, H757

High Pressure Hose

H290L, H579, H114, H145, H145R, H146, H190, H190H, H245, H280, H290, H290H, H325, H345, H350, H400, H425, H430, H430R, H464, H470, H485, H545

Specialty Hose

H0105, H0106, H115, H116, H201, H243, H265, H275, H277, H285, H335, H336, H435, H435Twin, H436, H436Twin, H900, H1571, H1719, H1776/H1777, H1812, H1941/H1942, H1981/1982, H1987, H6002, H6008, H6009, H8679, H9610, H9622, H9949

ACCESSORIES AND ASSEMBLY INSTRUCTIONS

Hose Abrasion Sleeves, Guards, Firesleeve, Bend Restrictors, etc.	78-87
Polycoil® Hose Products	88-89
Ready-Made Hose Assemblies	90-96

Accessories	97-102
Hose and Gear Clamps.....	103-105

ADAPTERS AND HOSE ENDS

Coll-O-Crimp® 'E' Series Hose Ends	106-112
Coll-O-Crimp 069 'E' Series Hose Ends	113-116
Coll-O-Crimp 336 'E' Series Hose Ends	117-120
Coll-O-Crimp 470 'E' Series Hose Ends	121-125
Coll-O-Crimp 757 'E' Series Hose Ends	126-133
Coll-O-Crimp 057 'P' Series Hose Ends	134
Coll-O-Crimp 229 'P' Series Hose Ends	135
Coll-O-Crimp 265 'P' Series Hose Ends	136
Coll-O-Crimp 338 'P' Series Hose Ends	137-139
Coll-O-Crimp 'S' Series Hose Ends	140
Coll-O-Crimp 'U' Series Hose Ends	141-158
Coll-O-Crimp 430 'U' Series No Skive Hose Ends	159-169
WeatherGRIP™ 'Z' Series Hose Ends	170-185
Field Attachable 009 'B' Series Hose Ends.....	186
Field Attachable 057 'B' Series Hose Ends	187-188
Field Attachable 100 'B' Series Hose Ends	189-191
Field Attachable 105 'B' Series Hose Ends	192
Field Attachable 338 'B' Series Hose Ends	193-195
Field Attachable 069 'D' Series Hose Ends	196-197
Field Attachable 'K' Series Hose Ends	198
Field Attachable 039 'K' Series Hose Ends	199
Field Attachable 104 'N' Series Hose Ends	200-202
Field Attachable 213 'N' Series Hose Ends	203-205
Field Attachable 247 'N' Series Hose Ends	206-210
Field Attachable 425 'N' Series Hose Ends	212-213
Field Attachable 436 'N' Series Hose Ends	214-215
E-Z Clip® System	
End Connections and O-Rings.....	216
Hose Ends.....	217-236
Cages, Clips and Lifesavers	237
Assorted Tools	238
Components Ordering and Identifying	239
Assembly Instructions	240-241
How to Order Adapters New to Eaton Weatherhead	242

Table of Contents

ADAPTERS AND TUBE HOSE ENDS

Steel Components

Adapters	243-256
Swivel Adapters	257-262
FOR-SEAL [®] Hose Ends	263-273
JIC 37° Flare-Twin [®] Fittings	274-302
Straight Thread O-Rings	306-308
Din Connectors	303-305, 308
Metric Connectors	309
BSP Connectors	310-313
Special Adapters	314
Steel Flareless Ermeto [®] Connectors	315-325
Ready-Lok [®] Adapters	326-329
Split Flange Adapters and Kits	330-333

WeatherGRIP[™]

STC Connectors	
How To Order	334
STC Connectors	335-336
Assembly Method and Verification	337
Crimp Hose Ends	338
Female STC Cap and Male STC Plug	339
STC Adapters	340-348
Accessories and Sales Tools	349

WeatherTIGHT[™]

4SP/6SP Series Hose Ends	350-359
--------------------------------	---------

EQUIPMENT & CRIMPING PROCEDURES

Coll-O-Crimp Shop Press Tooling, T-400-17	360
Air Conditioning Portable Crimper, T-475	361
Air Cond. Portable Crimper, T-475 Crimping Procedures	362-367
Coll-O-Crimp Portable T-465	368-369
Coll-O-Crimp T-465 Crimping Procedures	370
Coll-O-Crimp Portable T-464	371
Coll-O-Crimp T-460 Crimping Procedures	372
Coll-O-Crimp T-462 Crimping Procedures	373
Coll-O-Crimp Portable T-480	374-376
Coll-O-Crimp T-480 Crimping Procedures	377

Coll-O-Crimp T-480 Operating	378
Coll-O-Crimp I, T-400	379-380
Coll-O-Crimp T-400 Crimping Procedures	381
Coll-O-Crimp SUPER I, T-420	382
Coll-O-Crimp ET4000	383
Coll-O-Crimp T-420 & ET4000 Crimping Procedures	384
Coll-O-Crimp T-420 Crimping Procedures	385
ET1000 Portable Crimp Machine	386
ET1000 Crimp Procedures	387
WeatherGRIP Tooling	388-389
Coll-O-Crimp Collet Kits	390-393
Coll-O-Crimp Spacer Rings	394
Coll-O-Crimp Air & Hydraulic Pumps	395-397
Conversion Tooling	398
Cabinets, Tools Boxes, and Plastic Bags	399-401
Label Sets & Mylar Hose Labels	402
Air Brakes	403
Cable Controls	404-405
Tube Flaring Tools	406
Assortments	407-425
Field Attachable Assembly Equipment	426-427
Hose Cutting Equipment	428-430
Presetting Tools	431
Counterbore & Brazing Tools	432
Hose Bore Cleaning Brushes	433
Skiving Tools & Wrenches	434
Power Steering Assembly	435-437

TECHNICAL DATA & MISCELLANEOUS

Conversion Chart	438
Glossary	439-444
Index	444-453
Warranty	454

Eaton
14615 Lone Oak Road
Eden Prairie, MN 55344
USA
Tel: 952 937-9800
Fax: 952 974-7722
www.hydraulics.eaton.com

Eaton
20 Rosamond Road
Footscray
Victoria 3011
Australia
Tel: (61) 3 9319 8222
Fax: (61) 3 9318 5714

Eaton
Dr.-Reckeweg-Str. 1
D-76532 Baden-Baden
Germany
Tel: (49) 7221 682-0
Fax: (49) 7221 682-788



Weatherhead

© 2006 Eaton Corporation
All Rights Reserved
Printed in USA
Document No. W-HYOV-MC002-E1
Supersedes W-HYOV-MC002-E
September 2006